

# 215mm Two Drawer Unit for 35ml+ Bottles

Construction Instructions

[www.ebmahobby.co.uk](http://www.ebmahobby.co.uk)



## Introduction


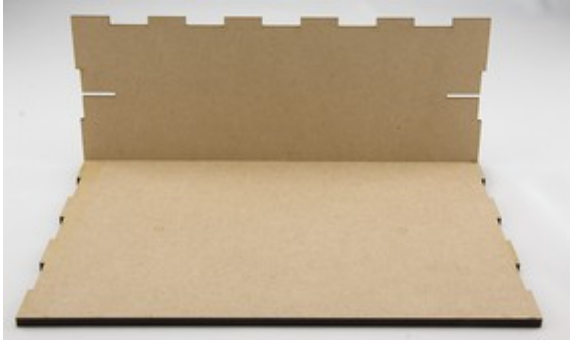
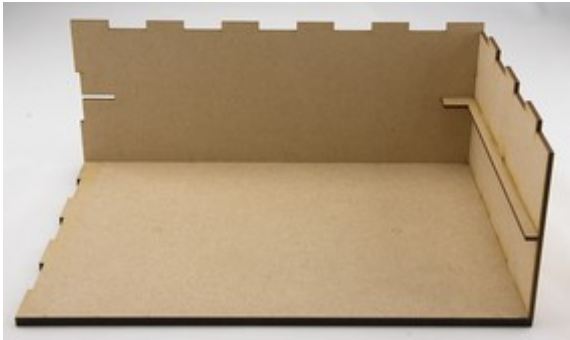
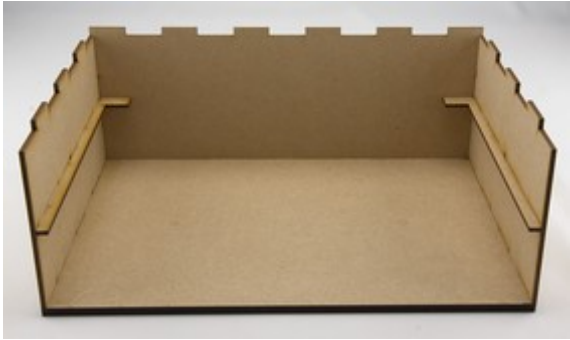
The EBMA Modular Storage Units are produced in a combination of 3mm and 6mm MDF. As such normal DIY woodwork procedures can be applied to them. The parts are cut by a laser cutter which results in smoke marks on the surface of the wood. One side of the wood will have slight marks and the other will be more pronounced. Some parts are symmetrical and you are therefore able to choose the visual effect you wish. For asymmetrical parts if you wish to remove the smoke marks then fine sandpaper may be used (use a sanding block, not just the paper on its own).

Where glue is required during assembly a good quality wood glue (PVA) should be used. When wiping the excess away wherever possible wipe it towards the burnt edge as this marks less.

Dry fitting components prior to gluing is highly recommended, i.e. compulsory! You should also use an engineers' square during construction to ensure that everything goes together absolutely square.


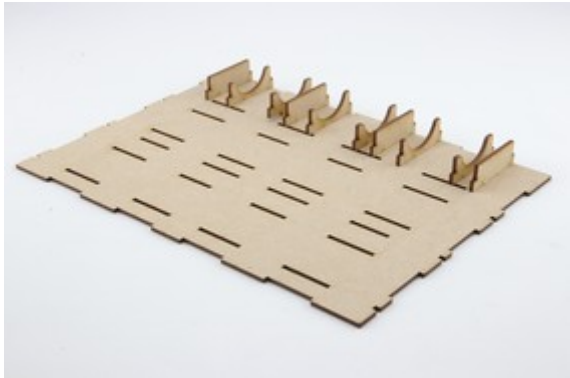
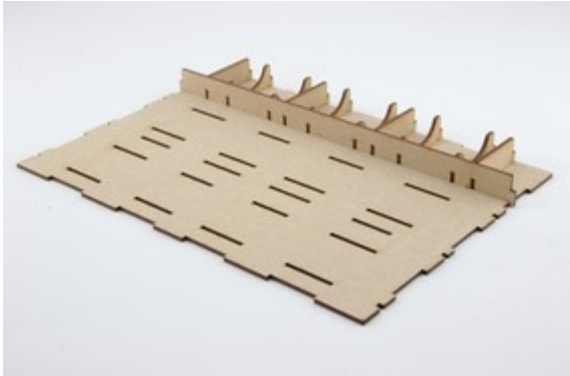
# Construction

## Shell


<p>1. Position the 3mm magnets into the side panels and the 6mm magnets into the top and base. Remember the polarity of the magnets.</p>	
<p>2. Glue the support shelves ensuring that they are at right angles to the sides and that the excess glue is removed. Failure to do the latter may mean that the drawers don't run smoothly.</p>	
<p>3. Glue the rear onto the base.</p>	
<p>4. Glue the right hand side on. With the sides it is often easier to slide the shelves into the rear and then align with the base.</p>	
<p>5. Glue the left side on.</p>	

<p>6. Glue the top on.</p>	
<p>7. The shell is complete and ready for the drawers.</p>	


## Drawers

<p>1. Place the rear bottle supports into the base. These do not need gluing. Note that there are two different curved supports. The tab slots are different to match the supports. Place the lower tag to the rear of the base as shown.</p>	 
<p>2. Place the slotted divider over the rear bottle supports. This does not need to be glued.</p>	


3. Place the main bottle supports and dividers onto the base. These do not need to be glued and the curved supports are in two thickness. The tab slots are different to match the supports.

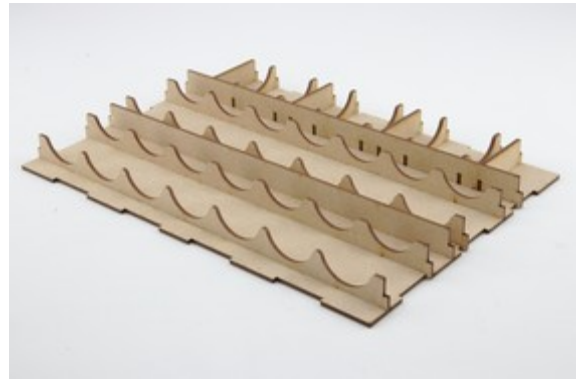

4. Glue the two sides on. Don't forget to dry run, it makes it much easier. Also remember to remove excess glue to ensure smooth running of the drawers.

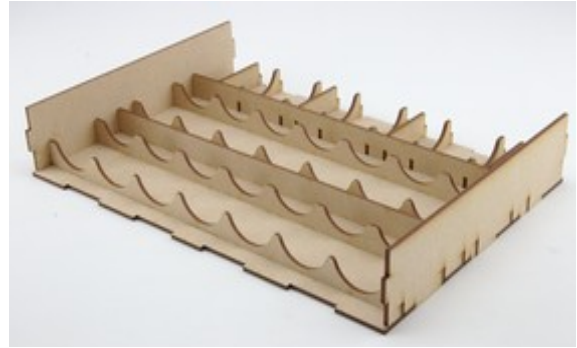

5. Glue the rear on.

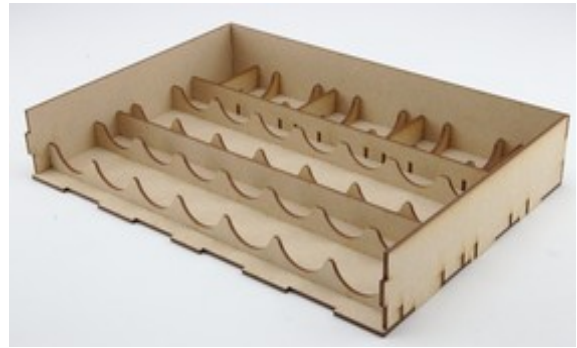

6. Glue the front on. Make sure that this is glued on well as you'll be pulling the weight of all the paints with this.

