

Tool Drawers

Construction Instructions

www.ebmahobby.co.uk



Introduction

The EBMA Modular Storage Units are produced in a combination of 3mm and 6mm MDF. As such normal DIY woodwork procedures can be applied to them. The parts are cut by a laser cutter which results in smoke marks on the surface of the wood. One side of the wood will have slight marks and the other will be more pronounced. Some parts are symmetrical and you are therefore able to choose the visual effect you wish. For asymmetrical parts if you wish to remove the smoke marks then fine sandpaper may be used (use a sanding block, not just the paper on its own).



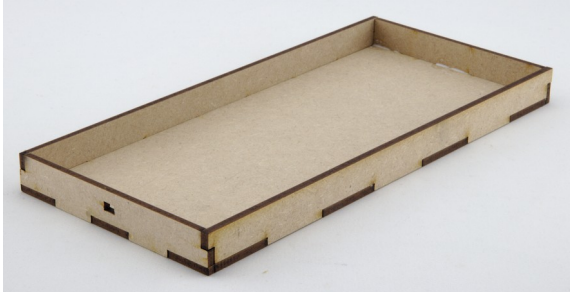
Where glue is required during assembly a good quality wood glue (PVA) should be used. When wiping the excess away wherever possible wipe it towards the burnt edge as this marks less.

Dry fitting components prior to gluing is highly recommended, i.e. compulsory! You should also use an engineers' square during construction to ensure that everything goes together absolutely square.

Whilst parts are drying it can be handy to hold them in place with masking tape. This can be used to help keep gaps closed.

Construction

Drawers

<p>1. Glue the rear to the base.</p>	
<p>2. Glue the sides onto the base. Remove any excess glue to ensure that the drawer will run smoothly.</p>	
<p>3. Glue the front on. Make sure it is a good joint as you'll be pulling the full weight of the drawer with this.</p>	
<p>4. Glue the drawer handle in place. The drawer is complete. Ensure that the glue is completely dry before inserting it into the carcass.</p>	